


Nilfisk Advance SC750

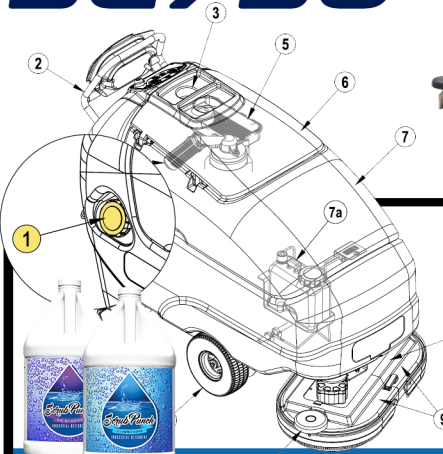

OPERATION

Solution Tank

CAUTION!
Use only low-foaming, non-flammable liquid detergents intended for machine application OR clean water that is less than 130 degrees Fahrenheit.

www.CleaningEquipmentDirect.com (866) 766-5553

FILLING THE SOLUTION TANK

Fill the solution tank with a maximum of 21 gallons (79.5 Liters) for SC750/SC750 ST models and 25 gallons (94.6 Liters) for SC800/SC800 ST models of cleaning solution. Do not fill the solution tank above 7.5 cm (3 inches) from the bottom of the Solution Fill (1). The solution should be a mixture of water and the proper cleaning chemical for the job. Always follow the dilution instructions on the chemical container label. **NOTE:** EcoFlex machines can either be used conventionally with detergent mixed in the tank or the detergent dispensing system can be used. When using the detergent dispensing do not mix detergent in the tank, plain water should be used.

Installing Brushes & Floor Pads

RED PADS
POLY BRUSHES

Turn the key switch off (O) and remove the key, before changing the brushes, and before opening any access panels.

- Make sure the Brush Deck (8) is in the RAISED position. Make sure the Key Switch (A) is off (O).
- If using pads, install the pads on pad holders.
- See Figure 2. To mount the Brushes (AA) (or pad holders) align the Lugs (BB) on the brush with the holes on the mounting plate and turn to lock in place (turn the outside edge of brush towards the rear of machine as shown (CC)).

3 Turn Key (ON)

4 Lower Brush Deck

5 Lower Squeegee Deck

6 Paddle Drive Buttons

7 Increase or Decrease Solution as needed.

8 Empty Recovery Hose

9 Empty Debris Tray

10 Press Brush Release Button


Make sure the Brush Deck is in the RAISED position. Make sure the Key Switch (A) is off (O).

Brush Release Switch

11 Servicing the Squeegee

If the squeegee leaves narrow streaks or water, the blades may be dirty or damaged. Remove the squeegee, rinse it under warm water and inspect the blades. Reverse or replace the blades if they are cut, torn, wavy or worn. Start by raising the squeegee deck off the floor & unsnap latches.

- | | | |
|-----------------------------|---|---|
| A Key Switch (Main Power) | G Scrub Pressure Increase Switch | F Display Panel |
| B Solution Increase Switch | H Scrub ON/OFF Switch (Disc System - Regular & Heavy) | F1 Hour Meter |
| C Solution ON/OFF Switch | H1 Scrub Pressure Indicator | F2 Solution Tank Level Indicator |
| D1 Solution Flow Indicators | I Scrub Pressure Decrease Switch | F3 Fault Codes |
| D Solution Decrease Switch | J EcoFlex Switch | F4 Detergent Indicator (if so equipped) |
| E Detergent ON/OFF Switch | K Brush Remove Switch (Disc Decks Only) | F5 Detergent Ratio Indicator |
| | L Vacuum/Wand Switch | F6 Battery Indicator |
| | | F7 Recovery Tank FULL Indicator |
| | | F8 Battery Low Indicator |

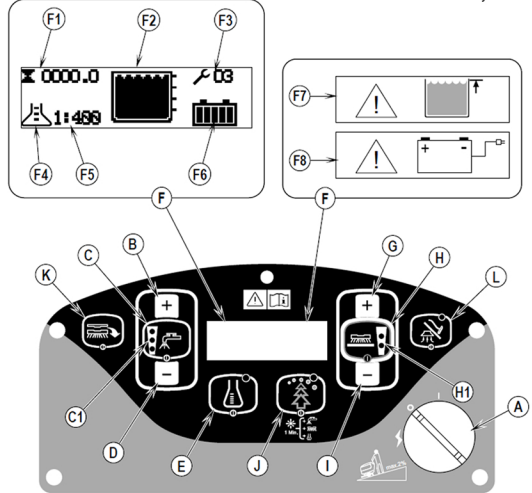

MAINTENANCE