

# WINDSOR

# CHARIOT 2 iGloss 20



## MAINTENANCE

86372400



01) When the pad indicator light glows red, inspect or change the pad.



02) To remove and install a pad, refer to directions on the deck.



03) Unlatch the front cover.



04) Inspect and change the filtration bag as needed.



05) Replace the secondary filter quarterly.



06) Take a clean rag and wipe down the exterior of the machine.



07) Plug the batteries back into the charger and maintain if necessary.

# WINDSOR

# CHARIOT 2 iGloss 20



## OPERATION

86372400



01) Unplug the batteries from the grounded outlet.



02) Put the key into the ignition and turn the machine on.



03) Check that both of the indicator lights are off. If either are on, check the bag or the pad.



04) Choose operation mode. FROM LEFT TO RIGHT: slow transport, fast transport, B1, or B2.



05) Step onto the grey platform.



06) Select the forward or reverse direction and press the green pedal to move.



07) IN CASE OF EMERGENCY: press the red button to stop the machine.