

# WINDSOR CHARIOT 2 iVAC 24 ATV



## MAINTENANCE


86374540



**01) INSPECT BRUSHES:** When the black brush bristles reach the height of the yellow indicator bristles replace the brush.



**02) Check the brushes, brush housing, and bearings.** Clean out any lint or debris.

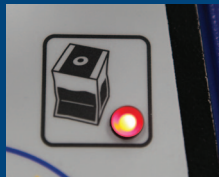


**03) When the bag full light comes on replace the bag.**



**04) Remove and clean the vacuum tray.**



**05) Take a clean rag and wipe down the exterior of the machine.**

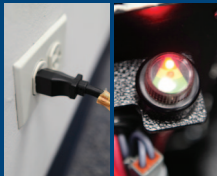

**06) Plug cord into outlet and verify that the charging light comes on.**



Bold Innovation. Expert Results.

# WINDSOR CHARIOT 2 iVAC 24 ATV



## OPERATION

86374540



01) Verify that the charging indicator light is green. Unplug the cord from the outlet & feed cord back into the machine.



02) Periodically check & clean out the vacuum tray.



03) Put the key into the ignition and turn the machine on.



04) Step onto the platform, make sure your heel contacts the operator presence switch.



05) Select direction, speed, and cleaning mode.



06) Press the green accelerator pedal to engage the drive, brush, and vacuum operation.



07) When bag full light comes on replace the bag. IN CASE OF EMERGENCY: press the red button to stop the machine.