WINDSOR



MAINTENANCE



01) Drain and rinse recovery tank.



02) Drain solution tank.



CLIPPER DUO

03) Clean off the float shut



04) Clean brushes and vacuum shoe.



05) INSPECT BRUSHES: When the brush bristles reach the height of the yellow indicator bristles replace the brushes.



06) Store brushes in the recovery tank bearing side up and vent the recovery tank dome for storage.



07) Soak spray jets in a solution of water and vinegar overnight.

WINDSOR

CLIPPER DUO









01) Install jets and brush.

02) Fill solution tank with extraction rinse or fresh water.

the main body of the cord. If one of the prongs is missing, notify your supervisor Plug into outlet and machine cord and twist to lock.



switch the control button to

upholstery tool.

86372290







pull cleaning and operator height.

06) Choose whether the water flows through the white let (mode A) for encapsulation cleaning or the blue iet (mode B) for deep extraction and rinsing.

intermittent spray. Press buttons on handle to control spray on intermittent mode.

WINDSOR

CLIPPER DUO





08) Overlap 2-3" on every pass and on intermittent spray release button and continue pulling for 1 foot before making a new pass.



09) Unplug the cord from the wall and the machine when finished.









