

WINDSOR



MAINTENANCE

86372530




01) Release lever to remove front cover (Versamatic Plus) or back cover (Versamatic).



02) Replace bag when full. From left to right: Versamatic Plus bag and Versamatic bag.



03) Replace filters quarterly. From left to right: Versamatic Plus filter and Versamatic filter.

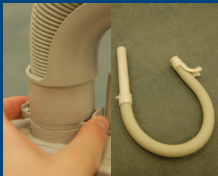

04) To remove a clog from the hose press the buttons to remove the hose and clean with a broom handle.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.

VERSAMATIC AND VERSAMATIC PLUS

WINDSOR




OPERATION

86372530

VERSAMATIC AND VERSAMATIC PLUS



01) Inspect brush for wear using a credit card and replace if necessary. (Screwdriver necessary to remove the brushes on some models)

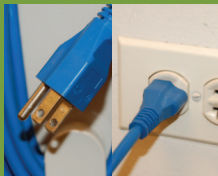

02) Make sure all three prongs are on the body of the cord and plug into an outlet. IF ONE OF THE PRONGS IS MISSING, NOTIFY YOUR SUPERVISOR.



03) Turn the machine on.



04) Starting at the highest setting, adjust brush height setting by setting until the orange light turns off.



05) Unplug the cord from the wall.



06) Hold the strain relief in an upright position so that the strain relief will not be damaged when the cord is wrapped.



07) Wrap the cord for storage starting from the base. Wrapping the cord properly will help prevent cord failure.