

**Save These Instructions** 

### READ ALL INSTRUCTIONS BEFORE USING!

Congratulations on purchasing a Powr-Flite self-contained extractor. Given proper care, this product will afford you many years of trouble-free operation. All parts have passed rigid quality control standards before being assembled to produce the finished product.

Prior to packaging, the extractor is again inspected for assurance of flawless assembly. This unit is protectively packed to prevent damage in shipment. We recommend removal and inspection of unit upon delivery for possible damage in transit. Only a visual examination will reveal damage that may have occurred. If damage is discovered, immediately notify the transportation company that delivered your extractor. As a shipper, we are unable to report claims for concealed damage. You must originate any claim within 5 days of delivery.

This manual is for your protection and information. **PLEASE READ CAREFULLY** since failure to follow precautions could result in discomfort or injury. When using electrical equipment, basic safety precautions should always be followed.

TABLE OF CONTENTS	
INTRODUCTION	2
SAFETY PRECAUTIONS (English)	3
SAFETY PRECAUTIONS (Spanish) (French)	
GROUNDING INSTRUCTIONS	6
GENERAL INSTRUCTIONS	7-8
Pre-operation Checks	7
Machine Operation	
Storage	
Routine Care & Maintenance	
ILLUSTRATED PARTS LIST	9-10
MAINTENANCE GUIDE	11

### CARE OF THIS SELF-CONTAINED EXTRACTOR

Treat this unit as you would any other high grade precision made product. Dropping, unreasonable bumping across thresholds and other misuses may result in a damaged unit which will not be covered by warranty. When not in use, power cord should be wrapped around handle for storage. Read this manual completely before operating this extractor. It is important to follow instructions in this manual to prevent the possibility of injury or damage to the user and/or machine.

### IMPORTANT SAFETY PRECAUTIONS

### **WARNING!:** To reduce the risk of fire, electric shock, or injury

**WARNING** To avoid fire, DO NOT use with a flammable or combustible liquid to clean floor.



**WARNING** To avoid electric shock, DO NOT expose to rain. Store Indoors.

### When using this self contained extractor, basic precautions should always be followed, including the following:

- **1. DO NOT** leave unit when plugged in. Unplug from outlet when not in use and before servicing.
- 2. DO NOT allow unit to be used as a toy. Close attention is necessary when used around or near children.
- **3.** Use only as described in this manual. Use only manufacturer's recommended attachments.
- 4. DO NOT use with damaged cord or plug. If unit is not working properly because it has been dropped, dropped into water, left outdoors, or damaged in any way, contact a service center of Powr-Flite®.
- 5. DO NOT pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. DO NOT run unit over cord. Keep cord away from heated surfaces.
- 6. DO NOT unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 7. DO NOT handle plug or appliance with wet hands.
- 8. DO NOT put any objects into openings. DO NOT use with any opening blocked: keep free of dust, lint, hair, or anything that may reduce air flow.
- **9.** Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- **10. DO NOT** pick up anything that is smoking or burning such as cigarettes, matches, or hot ashes.
- 11. DO NOT use to pick up hazardous chemicals.
- 12. Turn off all controls before unplugging.
- **13.** Turn unit off immediately if foam or liquid comes from machine exhaust. Empy & clean out recovery (dirty) tank and use defoamer to correct the problem.
- 14. DO NOT use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- **15. DO NOT** use where oxygen or anesthetics are used.
- **16. DO NOT** use an extension cord unless absolutely necessary. If an extension cord is used, then wire size must be #14 or larger and should not exceed 25 ft. in length. Extension cord must be a three-wire type to insure grounding protection.
- **17.** Replace damaged or worn parts immediately with genuine original equipment parts to maintain safety.
- **18.** This unit must be connected to a properly grounded outlet only. See grounding instruction.

DA
URI
EG
5
0
SAG
B
≝

Para reducar el riesgo de incendio, descarga electrica o daño:

NO SE exponga a la lluvia puede suceder sí se usa en Una sacudida electrica superficies humedas. a guarde bajo techo.

lamables o combustibles para levantar liquidos NO utilize la unidad como gasolina.

 
### PARA SU SEGURIDAD

- NO DEJE la aspiradora enchufada. Desconectela cuando no la use y antes de darle servicio. F
- NO PERMITE que se use como juguete. Ponga attencion cuando se use cerca de niños. آم
- USE SE SOLAMENTE de acuerdo a las instrucciones y con accesorios recomendados por el fabricante. ŝ
- NO USE con el cable o clavija dañados. Si la unidad ha sido golpeada, mojada, o dañada enalgun modo llame al centro de servicio o Powr-Filte∏. 4
- NO JALE o carque del cable, no machuque el cable o lo estire sobre objetos filosos. NO USE la unidad sobre el cable. 2
- NO DESENCHUFE jalando el cable. Para hacerlo jale de la clavija no del cable. 6
- NO TOME la clavija o el aparato con las manos mojadas. ŝ
- NO TAPE objetos en las ventilas. NO USE si alguna está tapada. Mantenga limpia de polvo, peluza o cualquier obstrucción 8
- Mantenga el pelo, ropa suelta manos y partes del cuerpo lejos de las aberturas y partes móviles. 6
- NUNCA aspire objetos que mandose o humeando como cigarros, cerillos o cenizas calientes. <u>1</u>0

- No use unidad a recoje materiales peligrosas. Ē
- Apajue todos los controles antes de desconectar. 12)
- Paga las unidad immediamente si hay espuma o liquidos saliendo da bajo de la unidad. Sí esto para limpia el tanqué y también usa un chemico de espuma. 13)
- **NO UTILIZE** la unidad para levantar liquidos filamables o combustibles como gasolina; o use en areas dande se encuentren estos liquidos. <del>1</del> (4
- Replacen los partes gastadas o dañadas immediamente para mentener la seguridad. 15)
- instrcciones de tierra. Sí su aspiradora/soplador tiene un enchufe para una boquilla de potencia, Esta unidad debe ser conectada a un enchufe correctamente aterrezado solamente. Vea los apaguela siempre antes de conector o desconector la goquilla. 16)
- NO USE donde oxigeno o anestesicos sean empleados 5
- **NO USE** extensión electrica mas que cuando sea absolutamente necesario. Si usa extensión, el cable debe de ser calibre #14 o mayor y no debe exceder 50 pies de longitud. El cable extensión debe ser de 3 polos para asegurar protection de tierra. 18)

## **INSTRUCCÍONES DE TIERRA**

Una coneccion incorrecta de tierra puede resultar en calificado o persona de servicio si tiene duda acerca del enchufe y su tierra. No modifique el enchufe de las unidad. Si no encaja en el enchufe, haga instalar una descarga electrica. Consulte con un electricista un enchufe apropiado por un electricista calificado.



# IMPORTANTES MESURES DE SÉCURITÉ

RTISSMENTI: Pour reduire les risques d'incendie, de choc electrique ou de blessure:

naitiéres humides. NE PAS aspire de Ne pas exposer à l'intérieur.



liquides inflammables l'appareil avec des en aspirant afin NE PAS utiliser d'éviter du feu.

## POUR VOTRE SÉCURITÉ

 
- NE PAS laisser l'appareil sans surveillance lorsqu'il est branche. Débrancher lorsque l'appareil n'est pas utilisse ét avant l'entretien. F
- **NE PAS** permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces derniers. ŝ
- N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant. ŝ
- **NE PAS** utiliser si le cordon ou la fiche est endom-magé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommagé, oublié à l'extérieur ou immergé 4
- poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. NE PAS faire rouler l'appareil sur le cordon. Garder **NE PAS** tirer, soulever ou traîner l'appareil par le cordon. **NE PAS** utiliser le cordon comme une le cordon à l'écarte des surfaces chaudes. 22
- Tirer NE PAS débrancher en tirant sur le cordon. plutôt la fiche. 6
- NE PAS toucher la fiche ou l'appareil lorsque vos mains sont humides. 1
- pas de capacité sufisante pour transporter le courant. NE PAS utiliser des rallonges ou des prises qui n'ont 8
- NE PAS utiliser où l'oxygène ou les gazes sont utilisès. 6

## **INSTRUCTIONS VISANT LA MISE À LA TERRE**

risque de choc électrique. Consulter un électricien ou un technicien d'entretten qualifié si vous n'êtes pas certain que la prise soit correctement mise à lat terre. Ne pas modifier la fiche fournie avec l'appareil-se elle ne peur être inséreé dans la prise, faire installer une prise adéquate par un electricien qualifié.

- N'INSÉRER aucen objet dans les ouvertures. ME PAS utiliser l'appareil orsqu'une ouverture est bloquée. S'assurer que de la poussière, de la peluche, des cheveux ou d'autres matières ne réduisent pas le débit d'air. õ
- Maintenir les cheveux, les vêtements amples, le doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles. <del>;</del>
- NE PAS aspirer de matières en combusion ou qui dégagent de la fumée, comme des cigarettes, des allumettes oiu des cendres chaudes. 12)
- NE PAS utiliser l'aspirateur pour soulever les produits chimiques dangereux. 33)
- Mettre toutes les commandes à la position ARRÊT avant dé debrancher l'appareil. 4
- Couper le courant immèdiatement si le liquide de nettoyage sort de l'appareil. Videz et nettoyez le réservoir interim et admettez le liquide de nulle écume. 15)
- bustibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver NE PAS aspirer des liquides inflammables ou comde tels liquides. 16)
- Replacez taré parties vite à maintenir sécurité. 5
- Ne brancher qu'à une prise de courant avec mise à la terre. Voir les instructions visant la mise à la terre. 18






### **GROUNDING INSTRUCTIONS**

### DANGER: Improper use of the grounding plug can result in a risk of electric shock.

### **GROUNDING INSTRUCTIONS**

This self-contained extractor must be properly grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. If repair or replacement of the cord or plug is necessary, **DO NOT** connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without stripes is the grounding wire.

### **GROUNDING METHODS**

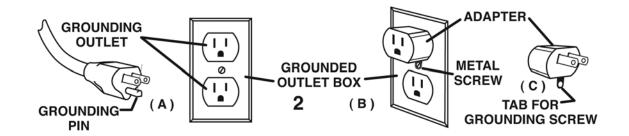

This unit is for use on a nominal 120 volt circuit, and has a grounded plug that looks like the plug illustrated in (Fig. A). A temporary adapter that looks like the adapter illustrated in (Fig. B&C) may be used to connect the plug to a 2-pole receptacle as shown in (Fig. B) if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet **(Fig. A)** can be installed by a qualified electrician. The green color rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

### WARNING!

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded.

DO NOT modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

### GENERAL INSTRUCTIONS

### PRE-OPERATION INSTRUCTIONS for PFX3S



NOTE - FOR COLOR FASTNESS: Before using carpet cleaning chemicals, test on an inconspicuous part of the carpet for color fastness. Place the solution on a small piece of clean white cloth or tissue. Rub the carpet area vigorously with the cleaning chemical. Excessive amounts of dye showing on the material would indicate that the colors are not colorfast, and should not be wet cleaned.

- Prepare room for cleaning, moving furniture as need to provide a clear working area. Cover bottoms of furniture legs where possible. (Aluminum foil or foam blocks are ideal for this purpose.) Pin up curtains and drapes.
- Gather cleaning supplies: a clean, suitable sized bucket, carpet cleaning solution, and pretreat solutions for heavily soiled traffic areas such as Powr-Flite's Fast Lane.
- 3. Disconnect vacuum hose from recovery tank and lift the RECOVERY TANK off of the SOLUTION TANK.
- 4. Measure carpet cleaning solution, per manufacturers recommended ratio, into the SOLUTION TANK and fill with hot water. DO NOT use the RECOVERY TANK to fill the SOLUTION TANK. Debris remaining in the tank could damage the pump or block the jet. WARNING: DO NOT exceed water temperature of  $150^{\circ}$  (65° C).
- Replace RECOVERY TANK on machine. Add defoamer solution, per manufacturer's instructions as needed, in RECOVERY TANK.
- 6. Replace the transparent cover on the RECOVERY TANK and connect the vacuum hose to the front of the RECOVERY TANK.
- 7. Pre-treat heavily soiled carpet areas as required.

### OPERATION OF SELF-CONTAINED CARPET CLEANER

- 1. Plug the power cord into an outlet. WARNING: This machine must be properly grounded. See Grounding Instructions on page 4 for additional information.
- 2. Press the VACUUM switch "on" and the BRUSH switch to the "right" position. See FIG C for a diagram on operational switches.
- 3. To clean the carpet, squeeze and hold the SOLUTION LEVER (FIG A) to apply the cleaning solution, pulling the machine backwards at the same time. Stop spraying the solution approximately 12 inches (30 cm) before the end of your pass, so that the extractor will vacuum up all of the solution. Slightly overlap the next cleaning pass to prevent streaking. To avoid overwetting, it is recommended that a maximum of only two wet passes (spraying solution) be done. One dry pass without spraying solution will also aid in drying time. After a few passes, check the RECOVERY TANK to verify that no foam is present. Add extra defoamer if necessary.
- 4. Empty the RECOVERY TANK when it is approximately 3/4 full. Do not refill the SOLUTION TANK without emptying all of the contents of the RECOVERY TANK first.

### GENERAL INSTRUCTIONS

### STORAGE

WHEN CLEANING IS FINISHED:

- 1. Disconnect the SOLUTION HOSE on the front of the machine by pushing in on the ring of the solution fitting.
- Connect the drain hose (clipped to the back) to the SOLUTION HOSE fitting and place the other end into the RECOVERY TANK. Press the SOLUTION switch to the "right" position. This will activate the motor to pump any remaining solution into the RECOVERY TANK for easy drainage.
- 3. When all of the solution is pumped from the SOLUTION TANK, turn the SOLUTION switch off, remove the power plug from the outlet and empty the RECOVERY TANK. Leave the RECOVERY TANK open when storing.
- Disconnect the DRAIN HOSE by pushing in on the ring of the SOLUTION HOSE fitting. Replace the DRAIN HOSE in the clip on the back of the machine, and re-connect the SOLUTION HOSE.



### ROUTINE MAINTENANCE INSTRUCTIONS

### DAILY / INTERVAL

- The filter in the solution tank (FIG 3) should be kept clean. It can be removed if necessary. A damaged filter should be replaced, otherwise blockages and/or damage to the pump head and spray jet can occur.
- 2. Check the spray jet (FIG 4) for blockage and a uniform spray pattern. Remove jet and blow through to clean. Do not use a pin or other sharp objects as this may cause damage to the jet.
- 3. Check and remove any debris or lint build-up from the vacuum head, brush, and brush housing.
- 4. Always wash out the tanks with clean water after use. To do this, pour clean water into the solution tank and spray through spray tip to clear chemical residue from the pump, lines, and spray tip. Allow the vacuum to run for a few minutes after use to aid the machine in drying out and to help prevent bacteria and odors.
- 5. Wash out mesh filter in RECOVERY TANK of dirt and carpet fibers after dumping waste from recovery tank. Failure to clean filter may cause damage to vacuum motor.





FIG. 4



SOLUTION SPRAY JET

### WEEKLY

1. Inspect hoses (unseen blockages sometimes occur), hose cuffs, and the rubber seal on the recovery tank lid. The main cable, plug, and switches should also be examined for damage.

**NOTE:** It is advisable to store the unit with the recovery tank lid removed. **CAUTION:** THIS UNIT MUST BE PROTECTED FROM FREEZING. Damage from freezing could cause machine to malfunction.

### **SELF-CONTAINED EXTRACTOR PFX3S PARTS**

ref #	order #	description	
	SC276	description Silicon hose	
2	SC339	Wheel with Cap (Complete)	
3	SC340	Starlock washer	
4	2-3124	Wheel Cap (Spares Only)	
6	SC301	Cable restraint	
7	2-3417	Nylon Washer	
8	SC302	1/4" Elbow Barb Black (P B.)	
9	SC231	1/8" male barb	
10	SC303	Bulkhd coupling Metal	
11	SC304	Female coupling Metal	
12	SC305	drain hose conn. Male	
13	SC306	Spray Nozzle	
14	SC307	Spray Nozzle Retaining nut	
15	SC308	Motor Pulley	
16	SC334	Brush Pulley	
17	SC309	Brush Drive Belt	
18	SC310	1/4" BSPT Metal Elbow Male	
19	2-3457*	Tube End Cap	
20	SC336	Handle Grip	
21	SC311	Handle lock knob	
22	SC312	Vac pick-up hose	
23	SC313	Nylon Brush Spacer 5~3/ 3	
24	02-3478-0000	Purnp Out Hose Clips	
25	SC275	1/4" BSPT Grey Elbow Male	
26	3-5589	Wheel spacer	
27	SC314	Bearing Housing	
28	SC315	Back Electrical Cover	
29	SC316	Vac motor cover	
30	SC317	Vac Lid	
31	SC318	Bottom cover	
32	3-5991*	Axle retain brackets	
33	SC341	Fluid Coupling Bracket	
34	SC319	Brush Body	
35	SC320	Handle	
36	SC147	Pick up Strip	
37	SC335	Filter element-waste tank	
38	3-6000*	Axle	
39	3-6001*	Rectifier heat sink	
40	TW091052*	Powr-Flite Label	
41	SC131	Gasket Strip (Bck + bot cvrs + Pum-	
42	3-6010*	Gasket bot 10 mm pads	
43	3-6011*	Champ Compact Sprayjet Label	
44	3-6012*	Champ Compact Pictorial Label	
45	SC154	Solution Tank	
46	SC321	Kecovery Tank	
47	3-6015	Pick-up	
48	SC342	Silicone Tube Tank Spacer	
49	3-6018*	Switch Label	
50	SC322	Bearing protector seal	
51	SC323	Vac Lid Seal	
52	SC212	Water path deflector plate	
53	SC214	Brush Motor Clamp Strip	
54	3-6033*	Motor Spacer	
55	4-286*	P clip	
56	SC324	Handle Switch	
57	SC325	BrushMotor (110 volt Version)	

ref #	order #	description
58	19020S	Vac Motor (110 volt Version)
59	SC327	Switch with cover
60	FJ5082	Solenoid Pump (110 volt Version)
61	SC329	Cut Out (110 volt Version)
62	4-3212*	Cable gland
63	4-3213*	Cable gland back nut
65	SC330	Motor cover seal (egg)
66	SC130	Vac Motor lip seal
69	SC333	Filter Element
70	SC337	Vac seal bottom
71	SC331	Vac seal top
72	SC12	Rectifier (brush Motor)
73	SC20	red nylon tube
74	M1400E	Powr-Flite Cordset
75	TW023055*	P-clip (internal)
76	SC98	6 mm bore hose
77	SC144	Jubilee clip
78	PX42	O-Clip Steel


FAS	TFN	IFRS

FASTE	ENERS			
90	2-3032*	Nylon Screw		
91	M5-R-ZN*	M5 Shakeproof Washers for Bondin		
92	SC137	M6 Spring Washers Stainless		
93	2-3463*	Stainless Rivets		
94	2-3464*	Screw for p clip		
95	FD66	Roto small tapper		
96	2-3466	Roto intermediate tapper		
97	SC347	Roto large tapper		
98	SC225	Housing Domenut		
99	SC116	M6 Handle Insert		
100	SC132	Brush Pulley Grub screw		
101	SC132	Motor Pulley Grub screw		
102	M4-I-ZN*	Nut for Nylon screw		
103	M5-16-BP-SS*	Deflector plate bolt -csk		
104	M5-16-CP-ZN*	Cable restraint bolt		
105	M5-20-CP-ZN*	Rectifier bolt		
106	M5-25-CP-ZN*	Earth Bonding Screw		
107	M5-I-ZN*	Rectifier nut		
108	M5-LN-SS*	Deflector plate nut		
109	M5-I-ZN*	Cable restraint nut		
110	SC226	Housing washer		
111	SC266	Rectifier washer		
112	7CL003	Housing spring washer		
113	M5-OHG-ZN*	Earth Bonding Screw Washers		
114	M5-P-ZN*	Rectifier spring washer		
115	PAS167	Pick-Up Bolt		
116	SC338	Handle Pivot Bolt		
117	SC136	M6 Motor Mounting Screws		
118	7CM003	M6 Motor Mounting Washers		
119	M8-OHG-SS*	M8 Pick-Up Mounting Washers		
120	X8217	M8 Shakeproof Washer for Pick-Up		
121	M4-OLG-ZN*	M4 Rectifler Washer		
122	M4-P-ZN*	M4 Rectif1er Spring Washer		
123	2-3485*	M5 Black Plastic Washer		

### NOT ILLUSTRATED

tool kit		
solution hose end, tool end		
solution hose end, machine end		
vacuum and solution hose assembly		
hose bag		
hand tool		
spray tip for hand tool		
48 brass bulk head, through tank		
washer for PX48		
and availability of all referenced parts		

### **SELF-CONTAINED EXTRACTOR PFX3S PARTS**

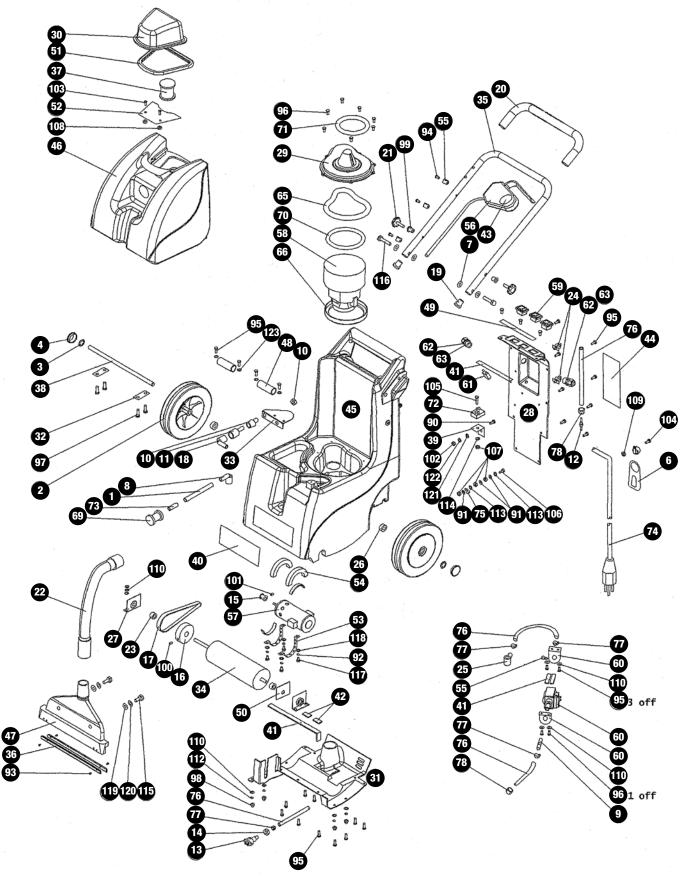

### MAINTENANCE GUIDE

### Motors not running

CAUSE:

- 1. Power not reaching main switch.
- 2. Defective power cord.
- 3. Faulty switches or wiring.
- 4. Blown fuse or tripped circuit breaker.
- 5. Problem with brushes, field windings, or armatures. (vacuum or brush motor)
- 6. Reset switch on back

### Loss of vacuum suction

### CAUSE:

- 1. Vacuum head blocked.
- 2. Hoses blocked.
- 3. Recovery tank not sealed properly.

### Brush not functioning properly

### CAUSE:

- 1. Belt broken.
- 2. Brush jammed.
- 3. Brush pulley broken.

### SOLUTION:

- 1. Check power supply. Check fuses/circuit breaker. Contact service center.
- 2. Contact manufacturer or service center.
- 3. Contact manufacturer or service center.
- 4. Reset circuit breaker according to operating instructions or replace fuse if qualified.. 5. Repair or replace defective part.
- 6. Push reset switch.
- SOLUTION:

- Visually inspect and clear blockage.
  Visually inspect and clear blockage.
  Check tank for damage or adjust for proper fit.

### SOLUTION:

- 1. Replace belt.
- Visually inspect and clear blockage.
  Replace pulley.

### Spray jet not functioning properly

### CAUSE

- 1. Jet blocked
- 2. Solution filter blocked.

### SOLUTION:

- 1. Visually inspect and clean according to operating instructions.
- 2. Visually inspect and clean according to operating instructions.

### WARRANTY

The manufacturer warrants to the original purchaser that products manufactured are free from defects of workmanship and material, provided such goods are installed, operated and maintained in accordance with written manuals or other instructions for a period of 1 year from date of purchase on parts and workmanship. In case you as our customer, meet any trouble with your machine, contact your Powr-Flite® representative who will be happy to be of service to you and will take care of the warranty settlement.

NOTE: Alterations and changes made to the machine without written approval of the manufacturer and use of unapproved spare parts will not be covered by warranty.

### SAVE THESE INSTRUCTIONS