



## MAINTENANCE

86372430



01) Drain and rinse recovery and solution tanks. Vent the recovery lid for storage.



02) Clean and rinse recovery tank



03) Inspect solution filter and clean as needed.



04) Clean squeegee assembly and inspect the blades. If the squeegee is damaged or worn, flip the blade or replace



05) Remove and inspect pad or brushes to clean and replace as necessary.



06) Take a clean rag and wipe down the exterior of the machine and vent tank lid for storage.



07) Plug the batteries back into the charger and maintain if necessary.



## OPERATION

86372430




**01)** Unplug the batteries from the charger and plug the batteries into the machine.



**02)** Fill solution tank with water and measured chemicals. If equipped with chemical metering fill it with desired chemical. Make sure brushes and or pads are installed.



**03)** Make sure that the solution tank cap and recovery lid are closed properly and make sure latch is secured.

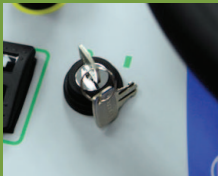

**04)** Put the key into the ignition and turn the machine on.



**05)** Choose operation mode. Clockwise starting at 1 o'clock: Eco-2, Normal, Heavy, Vacuum only, Water & Agitation only, Transport-1, Transport-2, Eco-1



**06)** Select direction (forward or reverse).



**07)** Step onto platform and press green pedal to move.



## OPERATION

86372430



08) Overlap 2-3" on every pass.



09) IN CASE OF EMERGENCY:  
press the red button to stop  
the machine.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.